



# Talking Bottle Recorder Instructions

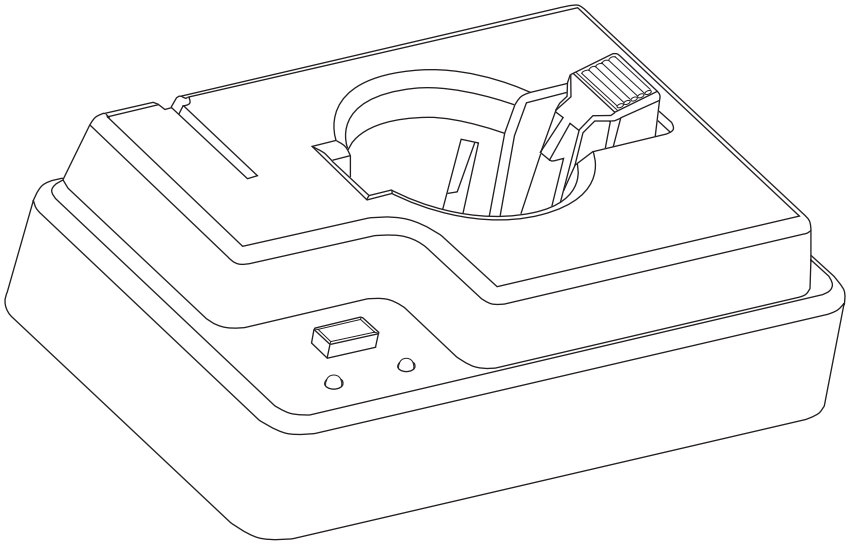


## 1. Attach Microphone

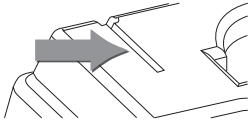


Slide the microphone base into the slot on top of recording unit. Adjust microphone height and angle to suit.

## 2. Plug-In Power

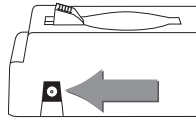


Plug transformer power cord into back of recording unit. Plug transformer into a 110 volt electrical outlet. Red light will turn on when power has been connected.

## 3. Insert Bottle

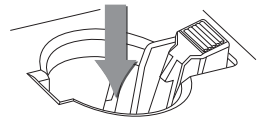


Insert a bottle into center pocket of recording unit, positioning the bottle's raised "locator ridge" and "play" button to your left, to fit the pocket slot. Push down until the bottle snaps into position and the green light turns on.

## 4. Record Message

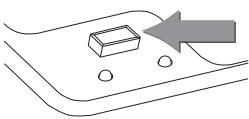


Depress the red button to record. When green light turns red, start recording a message, up to 32 seconds in duration. For best results, speak approximately 3 inches from microphone head.

## 5. Remove Bottle

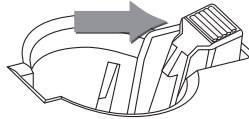

After recording your message, remove bottle by depressing the finger lever at the right side of the recording unit, and pull the bottle out of the recording unit center pocket.

## 6. Test Play Back

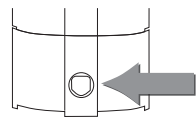

Push the "play" button on the bottle to confirm your information has been recorded properly.